

OPERATING THE REMOTE CONTROL

Your DC brushless motor is equipped with a automatically learned type remote control. Restore power to ceiling fan and test the transmitter as below for proper operation:

Install one 23A/12V battery (included). To prevent damage to transmitter, remove the battery if not used for long periods of time (Fig. 1)

Restore power to ceiling fan and test for proper operation.

A. I, II, III, IV, V and VI button:

These six buttons are used to set the fan speed as follows:

- I = minimum speed
- II = low speed
- III = medium low speed
- IV = medium speed
- V = medium high speed
- VI = high speed

B. ■ Button:

This button turns the fan off.

C. ↻ Reverse button:

This button is to control fan direction.

D. SET code setting button:

Follow the below steps to use the SET button:

- a) With the fan's power off, arrange code switches to desired code setting.
- b) After installing the unit and restoring power to the fan, press and hold the "SET" button 1 - 5 seconds. You must press the "SET" button within 60 seconds of restoring power to the fan.
- c) The fan will start to run and begin the control setting process. The fan will run in both directions for a total of approximately 5 minutes.
- d) When the fan stops after approximately 5 minutes, the control and speed setting process is complete and the fan is ready for use.

The receiver provides the following protective function:

1. Lock position: The DC motor has a built-in safety against obstruction during operation. If there is an obstruction, the motor will stop and then the power will automatically go off in 30 seconds. Remove the obstruction and reset.
2. Over 80W protection: When the receiver detects motor power consumption which is greater than 80W, the receiver power will be stopped and operation will immediately discontinue. Wait for 5 seconds and then turn the receiver power back on.

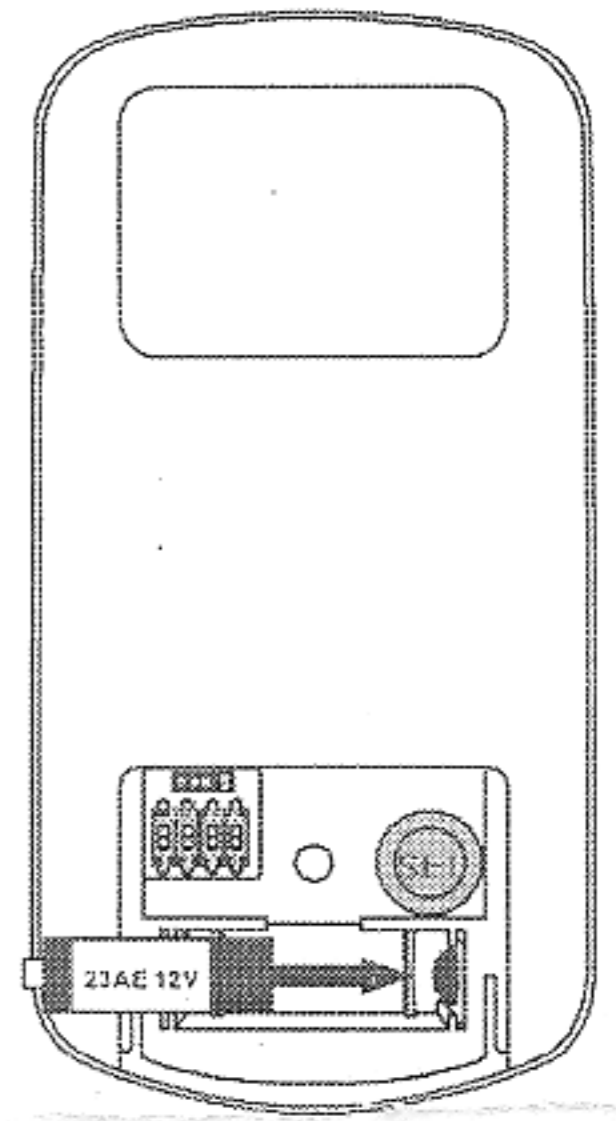


Figure 1

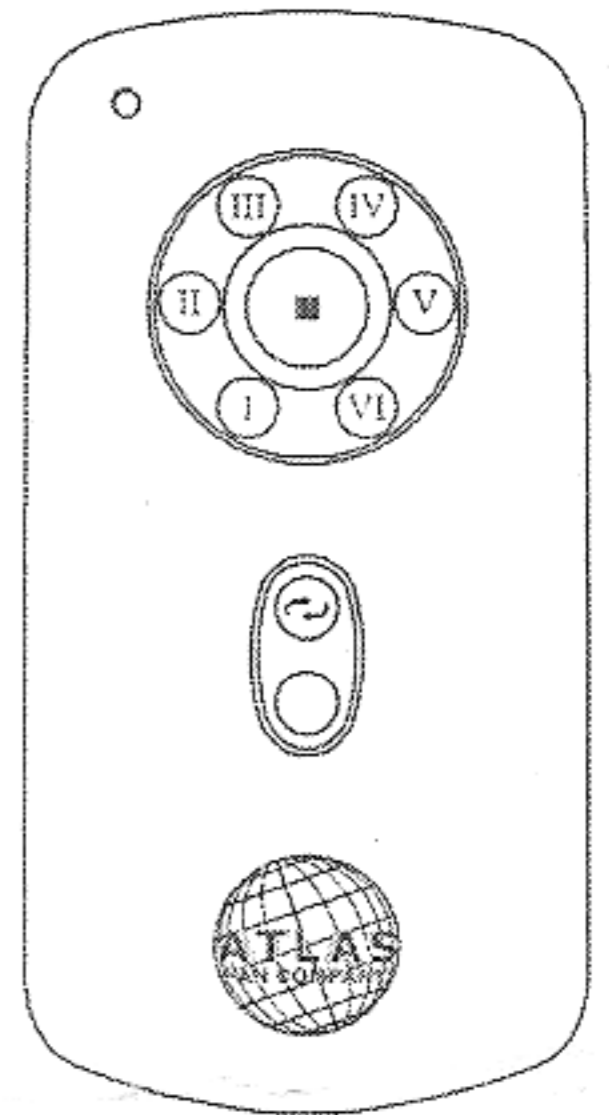


Figure 2